

# PRO-TECH SNO PUSHER®

## V PLOW MODEL (VPS)



V Plow Model (VPS)

### Operating your VPS Unit

1. Once the Sno Pusher is properly attached to your machine it **MUST** be leveled **BEFORE** plowing.
2. **WARNING:** Your V Plow has a hardened steel edge on the bottom. Make sure the path ahead of you is even and without obstructions, otherwise you could do damage to the plow, the surface or yourself.
3. The Sno Pusher V Plow Model is designed for sidewalk use. Snow is split and windrowed off both sides.

### Attaching your Sno Pusher VPS Model

Your Pro-Tech Sno Pusher® V Plow Model (VPS) is equipped with the manufacturer's OEM Quick Coupler

1. Remove the bucket from your skid-steer or tractor
2. Drive machine into the adapter located on the back of the Sno Pusher V Plow.
3. Engage the locking pins.

# USER'S GUIDE

## Maintenance

Your Pro-Tech V Plow requires only minimal service to remain in top condition. Follow these simple guidelines to ensure proper plowing and long life:

Your steel edge and small wear shoe should wear at the same rate. Once steel edge has worn, make sure you not only replace the edge but also the shoe. This ensures a level plow.


### **Be sure to always use Pro-Tech replacement parts.**

RP2015 – Standard Wear Shoe VPS

RP2035 – Heavy Duty Wear Shoe VPS

RP2055 – Super Duty Wear Shoe VPS

RP2730 – Steel Cutting Edge VPS

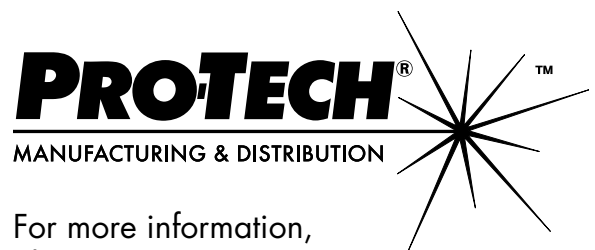

For more information,  
please visit us at:  
[www.snopusher.com](http://www.snopusher.com)